



Body Camera USER MANUAL

Model: A11

<https://www.recomove.com>



Welcome

 
Dear Customer

Thank you for purchasing this body camera. Before first use, please read this manual and scan the QR code for the latest video guide.

Your camera includes a 1-year warranty. Contact support if the unit arrives damaged or if you need help.






<https://www.recomove.com>

Support: info@recomove.com

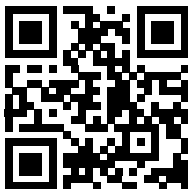

Scan to watch the training video
<https://www.recomove.com/a11>

     Diagram

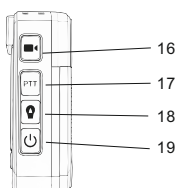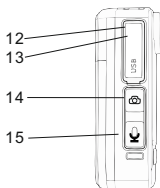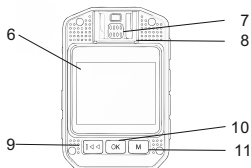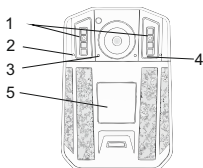

1. SOS Light/IR Lights
2. Microphone
3. Recording LED
4. Charging LED
5. Battery Cover
6. 2 inch LCD Screen
7. Speaker
8. Back Clip Slot
9. Left Button/Playback Button
10. OK Button
11. Right Button/Menu Button

12. USB Cover/Type C Port
13. Reset Hole
14. Photo Button
15. Audio Button/Return
16. Video Button
17. PPT Button
18. IR Button
19. Power Button
20. ID Label Slot
21. TF Card Slot
22. Pogo Pin
23. Battery Cover Lock

Specification

RECORDING	
Video Resolution	1080P / 720P/480P
Video Format	AVI
Audio	Built-in high-quality microphone
Record LED	Front LED indicator
PHOTO	
Photo Format	JPEG
Snapshot	Capture photos during video recording
BATTERY	
Battery	2 Pcs Replaceable Battery 2000Mah
Charging Time	Approx. 3 hours
Battery Life	About 20 Hours with 2 Batteries
OTHER FEATURES	
Storage	External TF card, up to 512 GB
Password	Menu and USB access protection
Covert Mode	Turns off LED indicators and sounds
ACCESSORIES	
Optional	chest harness, shoulder clip, car mount

Before First Use

Insert and Format the Memory Card

Insert a TF card before recording. Format the card in the camera before first use.

1. Power on the camera.
2. Press Menu to enter settings.
3. Select Formatting and confirm OK.
4. Wait until formatting completes.

Warning: Formatting erases all files. Back up important data first.



Common Features

Power On / Off

1. Hold Power Button for 3 seconds to turn on the camera.
2. Hold Power Button for at least 3 seconds to power off. The current recording file is saved before shutdown.

Recording Video

1. In standby mode, press the recording button.
2. The front LED and screen timer indicate recording.
3. Press the recording button again or follow the model-specific stop action to save the file.

Recording Audio

1. Press Audio to start audio recording.
2. Press Audio again to stop and save the audio file.

Take Photo

1. In standby or video recording mode, press Photo. The camera plays a shutter sound when the photo is saved.

SOS Function


1. Press the PTT/SOS button to activate the SOS light or siren mode.
2. Press again to change or exit the SOS mode according to the model setting.

Warning: Do not use siren mode where it is prohibited.

Playback and Delete Files

1. Open Playback from playback button.
2. Use Left and Right to choose Video, Photo, or Audio folders.
3. Select a file and press OK to play or pause.

Playback Button

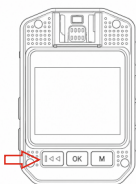


Force Shutdown

1. press Reset hole (Inside USB Cover) with a small pin.
2. Restart the camera after shutdown.

Charge the Camera

1. Open the USB cover and connect the included cable to a 5V charger or computer USB port.
2. The charging LED lights while charging and turns off when fully charged. You can also use the battery base to charge the camera and the battery at the same time.

Warning: Use a 5V charger. Do not use damaged cables.

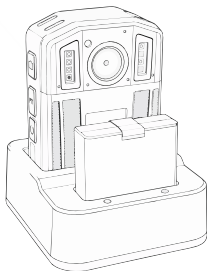


Replace Battery

If you purchased the dual-battery version, unlock and remove the battery cover before replacing the batteries.

1. Slide the battery cover lock to the unlock position.
2. Push the battery cover downward and remove it from the camera.
3. Take out the battery and insert a charged replacement battery in the correct direction.
4. Reinstall the battery cover and lock it before use.

Warning: Power off the camera before replacing batteries. Use only compatible batteries.

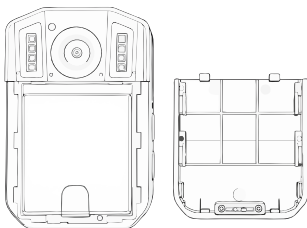

Parameter / Menu Setting

Setting	Options	Description
Video Resolution	1080P/720P/480P	Default: 1080P Choose video resolution. Lower resolution saves storage.
Photo Size	1/3/5/8/10/12/26/34M	

Setting	Options	Description
Loop Recording	On / Off	Default: Off When storage is full, oldest unlocked files may be deleted to save new files.
Clip Length	3 / 5 / 10 / 20 minutes	Default: 5 minutes Sets each saved video segment length.
Post Record	Off / 10 s / 30s / 1 min	Default: Off Continues recording for a selected time after stopping.
EV	-3 to 3	Default: 0 Exposure Adjustment
Motion Detect	Off/On	Default: Off When detect motion will start video recording
IR Switch	Manual/Auto	If set to auto, camera will enable night vision automatically
Screen Saver	Off / 1 min / 5 min	Default: 1 min Turns off the screen after inactivity.
Auto Off	Off / 5 / 10 / 30 min	Default: Off Powers off in standby after selected time.
Volume	Off/High/Medium/Low	Default: High
Language	English / Chinese / Japanese / Korean / French / German / Spanish	

RECOMOVE >>>

Setting	Options	Description
ID Setting	User ID and Device ID setting	Change User and Device ID Together
Date Stamp	On / Off	Default: On. Adds date and time watermark to video.
Password Protect	On / Off	Default: Off. Enable Password Protection. Need to enter correct password first
Change Password	6 digits	Default: 000000 Changes the menu or USB access password. Warning: Keep the new password in a safe place.
Audio Rec.	On / Off	If you choose off, camear will not record audio info when recording video. The Video will be silent
Car Mode	On / Off	Default: Off When detecting car charging signal, the camera will start video recording
Voice Prompt	On / Off	Default: On Enable/Disable voice prompt

Setting	Options	Description
Covert Mode	On / Off	Default: Off Turns off lights and sounds for discreet recording. Warning: Confirm local usage requirements before using stealth mode.
Format	OK / Cancel	Formats the TF card in the camera. Warning: Formatting deletes all files on the card.
Default	OK / Cancel	Reset camera setting
Version	View only	Shows firmware and device information.
Date/Time	Date and time	Set the correct date and time before first use.

Connect to PC / Mobile Phone

Connect to PC

1. Connect the camera to your PC with the included USB cable.
2. Choose USB disk mode/Mass Storage when prompted if applicable.
3. Open the camera disk and copy Video, Audio, or Photo files.

Warning: If password protection is enabled, enter the correct password to access the USB disk.

Camera Mounting Accessories

Install the Back Clip

1. Slide the back clip into the clip slot until it locks.
2. Check that the clip is secure before use.



LCD Information

LCD Information

The LCD screen may show video resolution, battery, storage, date/time, recording status, and card information.



Troubleshooting / FAQ

Failure	Diagnosis	Solution
Camera cannot power on	Battery may be low	Charge the camera for at least 3 hours and try again.


RECOMOVE >>>

Failure	Diagnosis	Solution
Camera is unresponsive	System may be frozen	Hold Power for 15 seconds or press Reset if available, then restart.
Device failed to connect to computer	Cable, USB port, or password lock issue	Try another USB port or cable. Enter password if USB protection is enabled.
Short recording time	Card speed, loop setting, or battery level issue	Use a high-speed TF card, format it in the camera, and fully charge the battery.
No memory card shown	Card is missing or notReformatted	Insert the TF card and format it to FAT32 or exFAT according to model requirements.
SOS has no sound	Button sound or sirenCheck setting may be disabled	Check menu sound settings and SOS mode settings.

Help & Support

Need Help?

 Scan the QR code or contact support for setup videos, accessories, and troubleshooting help.

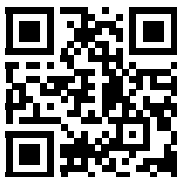

Scan to watch training video
<https://www.recomove.com>
Support: info@recomove.com

